


**Ex d**  
**Optical Beam Smoke Detector**

**User Guide**

**EN**

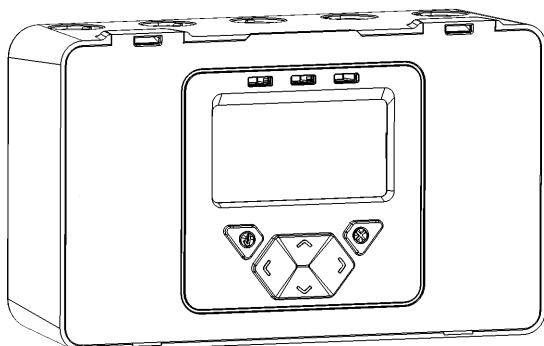

## 1. Description

This Ex d Optical Beam Smoke Detector is used for fire detection in explosive atmospheres.

It consists of a standard Controller, combined with rugged flameproof / dustproof Transmitter and Receiver heads. The Transmitter and Receiver heads are designed to be mounted within the protected hazardous area, whilst the Controller is housed outside it.

Once installed, the Transmitter head projects a modulated infra-red beam (inherently safe optical radiation) across the protected area, to the Receiver head mounted opposite. The received signal strength is monitored and analysed in the Receiver, and should the signal strength fall below the preset threshold for more than the fire delay selected by the user, a fire alarm is signalled to the Controller.

## 2. Statement of Intended Use

This system is intended for use as a Smoke Detector only, in Ex d IIC/IIIC, or lower grade areas. It must not be used in areas with a greater hazard rating. It must be installed and tested by approved, competent personnel, in accordance with all regulatory and local codes of practise. No liability shall be accepted for installations not conforming to this requirement.

### Specific Conditions of Use

This equipment is covered by certificate numbers Sira 15ATEX1260X and IECEx SIR 15.0089X.

This equipment includes a non-metallic outer protective coating. To avoid the possibility of electrostatic charges, cleaning must only be carried out with a damp or anti-static cloth.


### General Instructions

1. The equipment may be used with flammable gases and vapours with apparatus group II and with temperature class T6 in the ambient temperature range -20°C to +55°C. The IIIC in the code indicates the equipment can be used in Flammable Dusts.
2. The equipment is only certified for use in ambient temperatures in the range -20°C to +55°C and should not be used outside this range.
3. Installation should be carried out by suitably trained personnel in accordance with the applicable code of practice.
4. Inspection of this equipment shall be carried out by suitably trained personnel in accordance with the applicable code of practice.
5. The equipment may be supplied with plastic transit caps installed in the threaded cable entry points. These must be removed and replaced with suitably certified Ex db cable glands or Ex db blanking elements as appropriate.
6. The equipment does not have any user-serviceable parts and must be returned to the manufacturer for servicing or repair.
7. This Installation Guide contains the system Principle of Operation; system Specification; Installation Precautions; Installation Setting Up and Testing; Installation diagrams.
8. The certification of this equipment relies upon EMH29 Enclosure Component (typically Aluminium Alloy) Certificate No. TRAC13ATEX0058U from JCE (Europe) Ltd., IECEx TRC 13.0020U.
9. If the equipment is likely to come into contact with aggressive substances, then it is the responsibility of the user to take suitable precautions that prevent it from being adversely affected, thus ensuring that the type of protection provided by the equipment is not compromised.

Aggressive substances: e.g. acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials.

Suitable precautions: e.g. regular checks as part of routine inspections, or establishing from the material's data sheets that it is resistant to specific chemicals.

Label details:


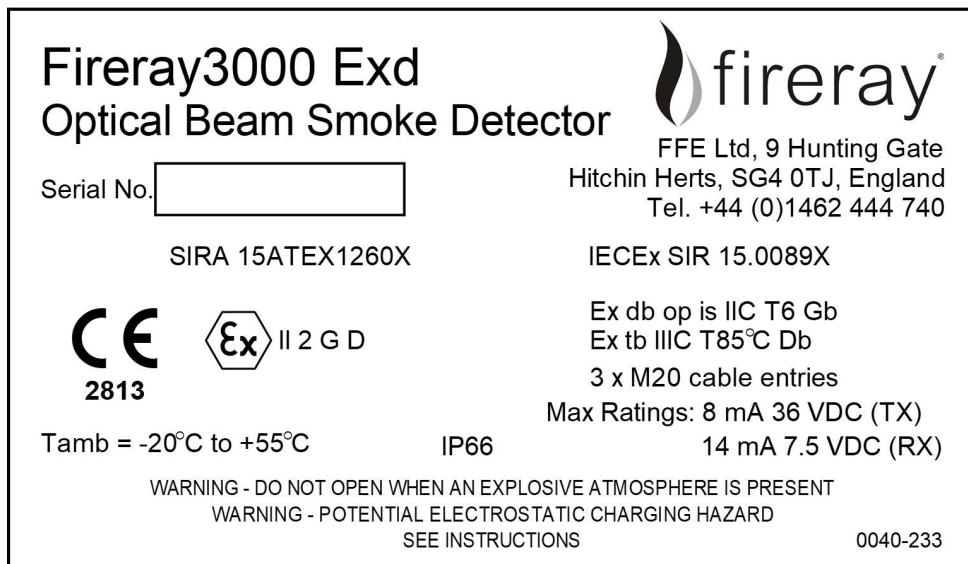


## WARNING

*The area into which the parts are to be fitted must be made safe before attempting any work on the system. It must also be checked thoroughly prior/during/after commissioning, to ensure it cannot compromise the safety of the area in which it is fitted. Note that only the transmitter and receiver parts may be installed in the hazardous area, NOT the controller unit.*

*If the flamepath of the enclosure is damaged in any way, the unit must be returned to the manufacturer and a new unit purchased.*


### 3. General Information

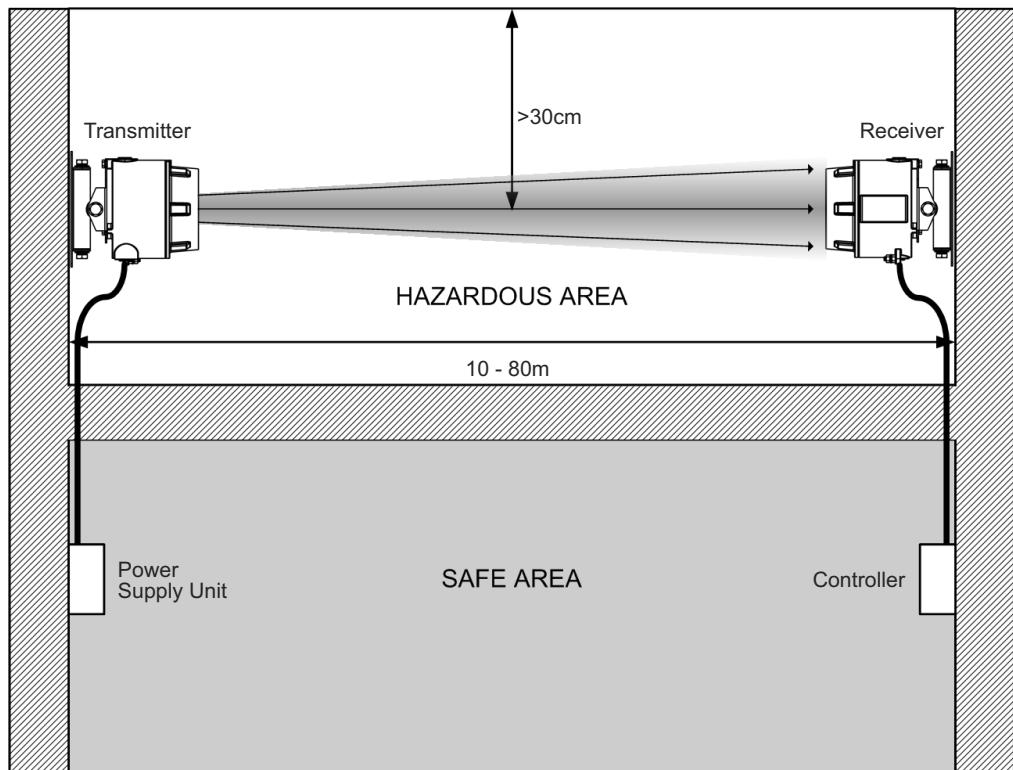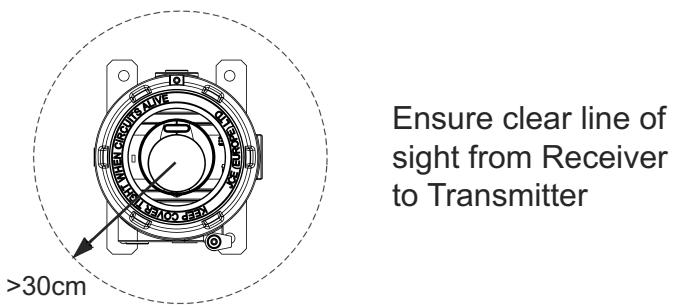


- **IMPORTANT NOTE: The infrared beam path MUST be kept clear of obstructions at all times! Failure to comply may result in the system initiating a Fire or Fault signal.**
- All installations should comply with local regulations
- Ensure a clear line of sight from Receiver to Transmitter
- Mount on solid surfaces (structural wall or girder) and ensure fixing is rigid
- Position beam as high as possible, but with a minimum distance of 30cm from Receiver/Transmitter to ceiling
- Mount Receiver and Transmitter directly opposite each other
- Do NOT position where personnel or objects can enter the beam path
- Do NOT install the Transmitter or Receiver in environments where condensation or icing are likely to occur

## 4. Wiring Diagrams

Wiring two Receivers onto two zones:

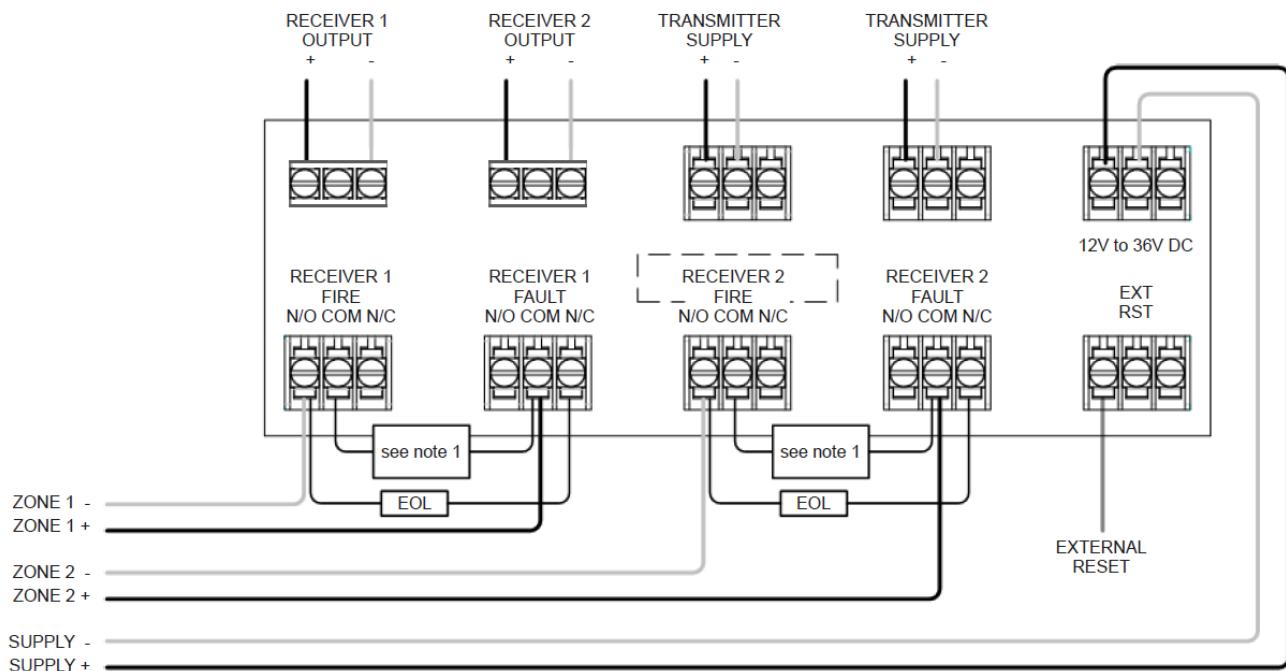


For connection of two Receivers to one zone:

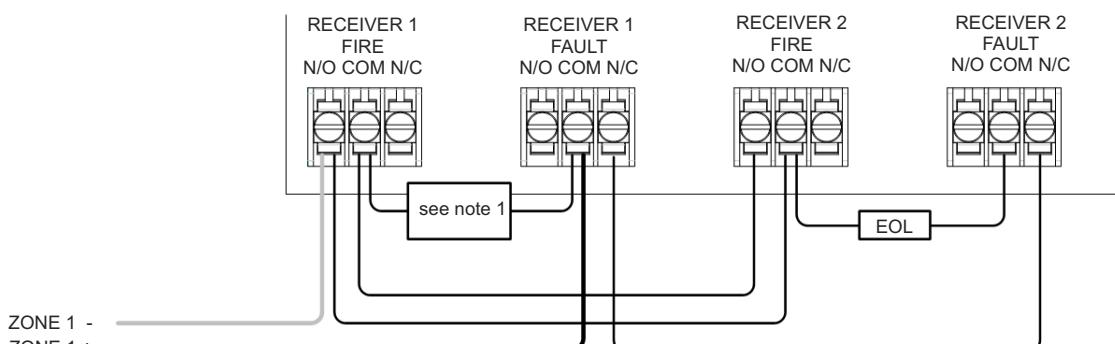


- Note 1: This component is the fire resistor. Its value is specified by the Fire Control Panel manufacturer. For U.S. installations it is typically a short circuit
- ALWAYS use a separate 2-core cable for each Receiver head
- CAUTION: For system monitoring - Do not use looped wire under any terminals. Break wire run to provide monitoring of connections
- Components not supplied:
  - End Of Line ('EOL') component - supplied by Fire Control Panel manufacturer
  - Fire Resistor
- After installation, check operation of Fire and Fault connection on Fire Panel
- Apply a voltage of 5V to 40V to 'EXT RST' contact for at least 2 seconds to clear a latched fire condition
- For wiring to other types of Fire Control Panel, or to wire multiple Controllers onto one Zone, refer to additional installation instructions supplied with the product

## 5. Fitting the Product

### Step 1

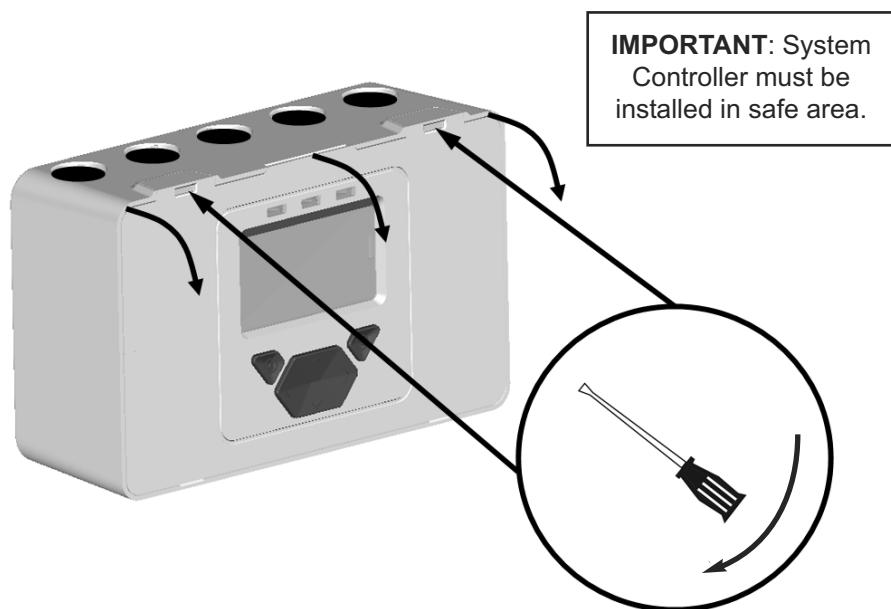

### Step 2: Attach bracket

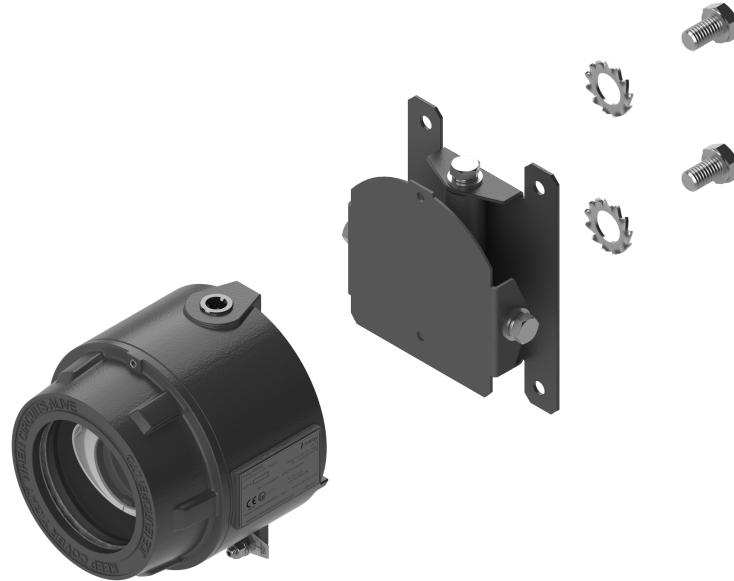


### Step 3: Mount to solid surface



## Step 4: Wiring

RECEIVER:


All cable glands to be suitably certified and selected in accordance with IEC/EN 60079-14

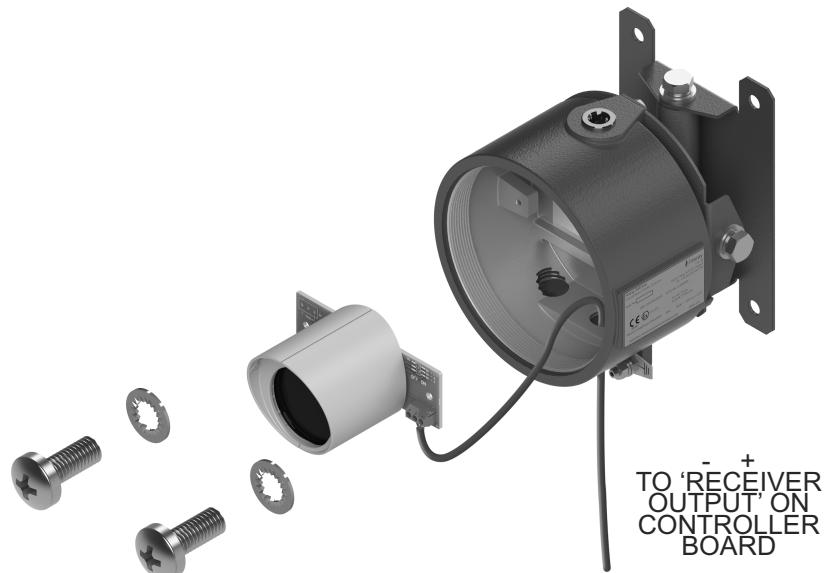

TRANSMITTER:

**IMPORTANT:** select correct DIL switch setting for distance

SWITCH			Distance in Metres
SW - 1	SW - 2	SW - 3	
OFF	OFF	OFF	75 - 80
OFF	OFF	ON	50 - 75
OFF	ON	ON	25 - 50
ON	ON	ON	10 - 25

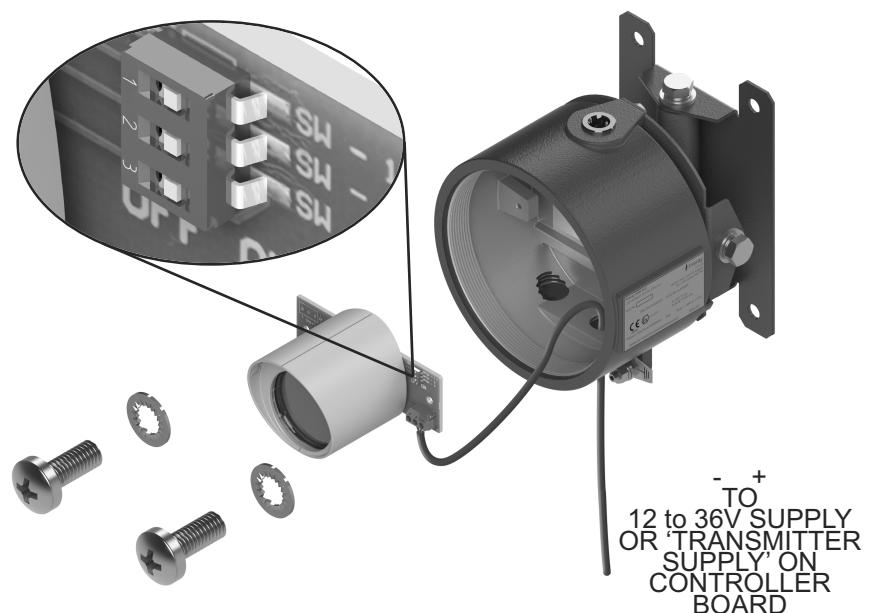

## Step 5: Secure covers


3mm Hex Key (supplied)

**IMPORTANT:** secure covers on Transmitter and Receiver using the locking screw **BEFORE** applying power




## 6. Apply Power


NOTE: One System Controller can be used to control and monitor up to two Receiver heads. The '#' symbol in this guide is used to represent the number of the Receiver currently selected (1 or 2).

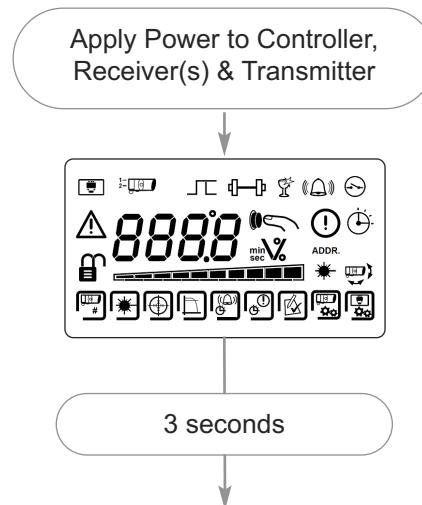


- Receivers are not found (normal at this stage):

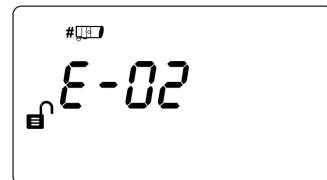


- Commissioned System:

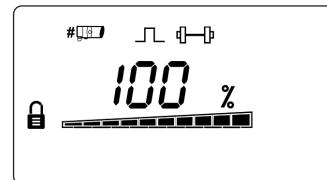

- Receivers have been found but not commissioned:

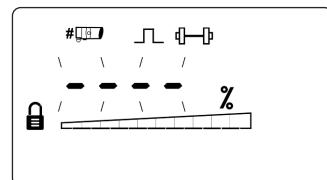


- Communications fault, or no Receiver connected:

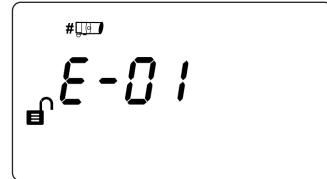

## 7. Enter Pass Code to Access Engineering Menu

Press **✓** to enter PASS CODE SCREEN in USER MENU

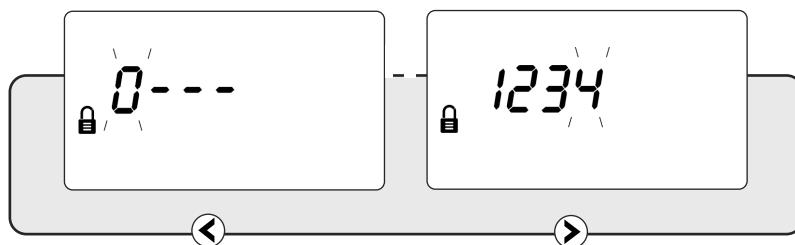

Default Pass Code: **1 2 3 4**

**▲** **▼** Change digit


**◀** **▶** Move between digits

**✓** Accept

- An incorrect Pass Code will return the display to the Pass Code entry screen
- Three incorrect attempts will lock access for three minutes

## 8. Finding Receivers


- Perform 'Find' during initial installation, or when adding or removing Receivers

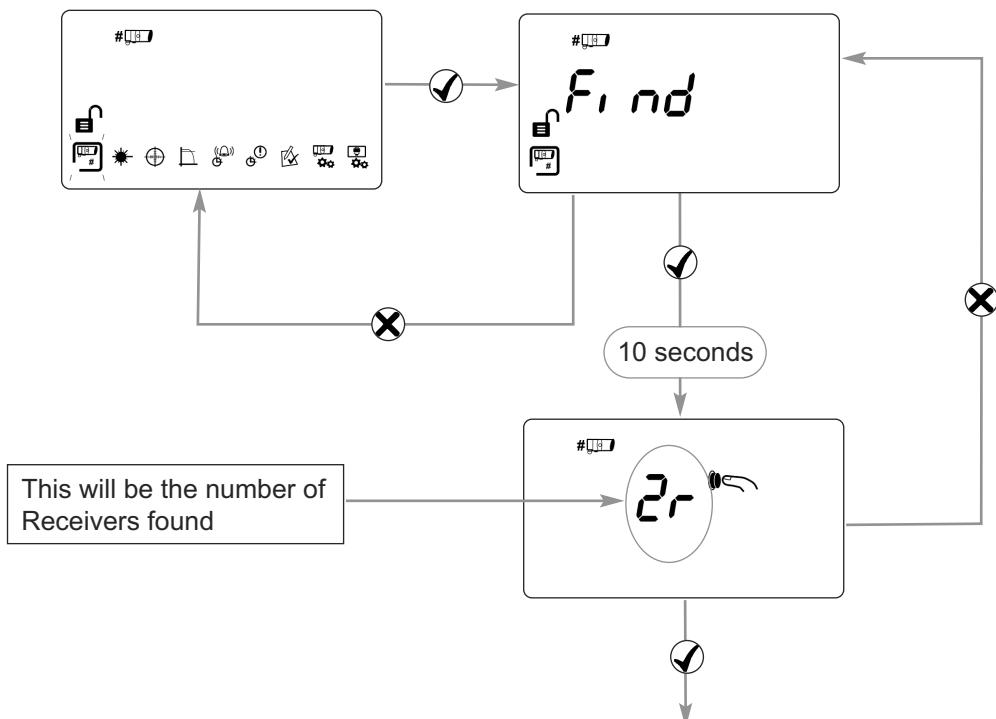

- Press **✓** to enable 'Found' Receivers
- Any unused Receiver channels are switched off
- Press **X** to re-scan if the number is incorrect


## 9. Select Receiver to be Accessed

- All Receivers need to be aligned separately
- Steps 10 and 11 explain how to align individual Receivers

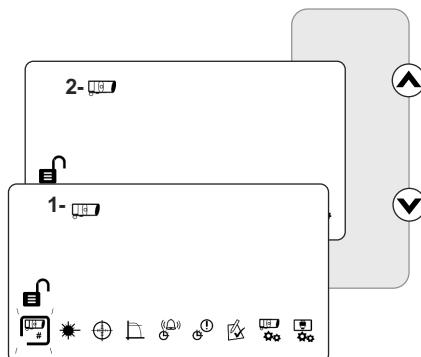

## 10. LASER Targeting


- The LASER in the Receiver head is used to align the Receiver with the Transmitter.
- The LASER can be activated using the LASER icon in the ENGINEERING MENU as shown below.
- Move the LASER as close to the Transmitter as possible, by moving the Receiver's bracket
- The system will signal Fault while in this mode

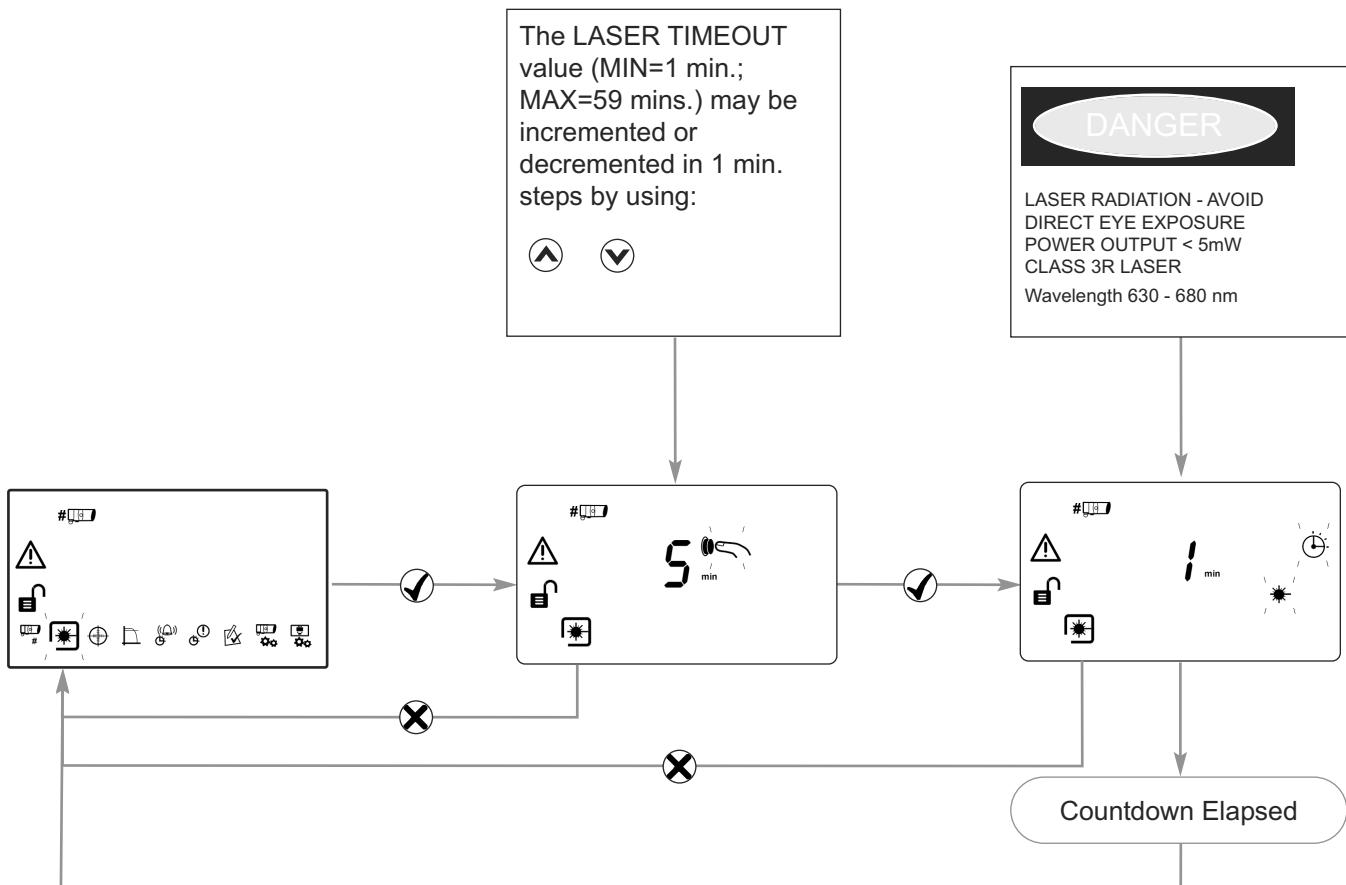


If it is not possible to see the LASER because of the installation environment (for example, if there is high ambient light) then align the Receiver by eye so that it is pointing at the Transmitter.

## 11. Alignment

In Alignment Mode you are centring the Transmitter beam onto the Receiver and the system is adjusting its power for optimum signal.

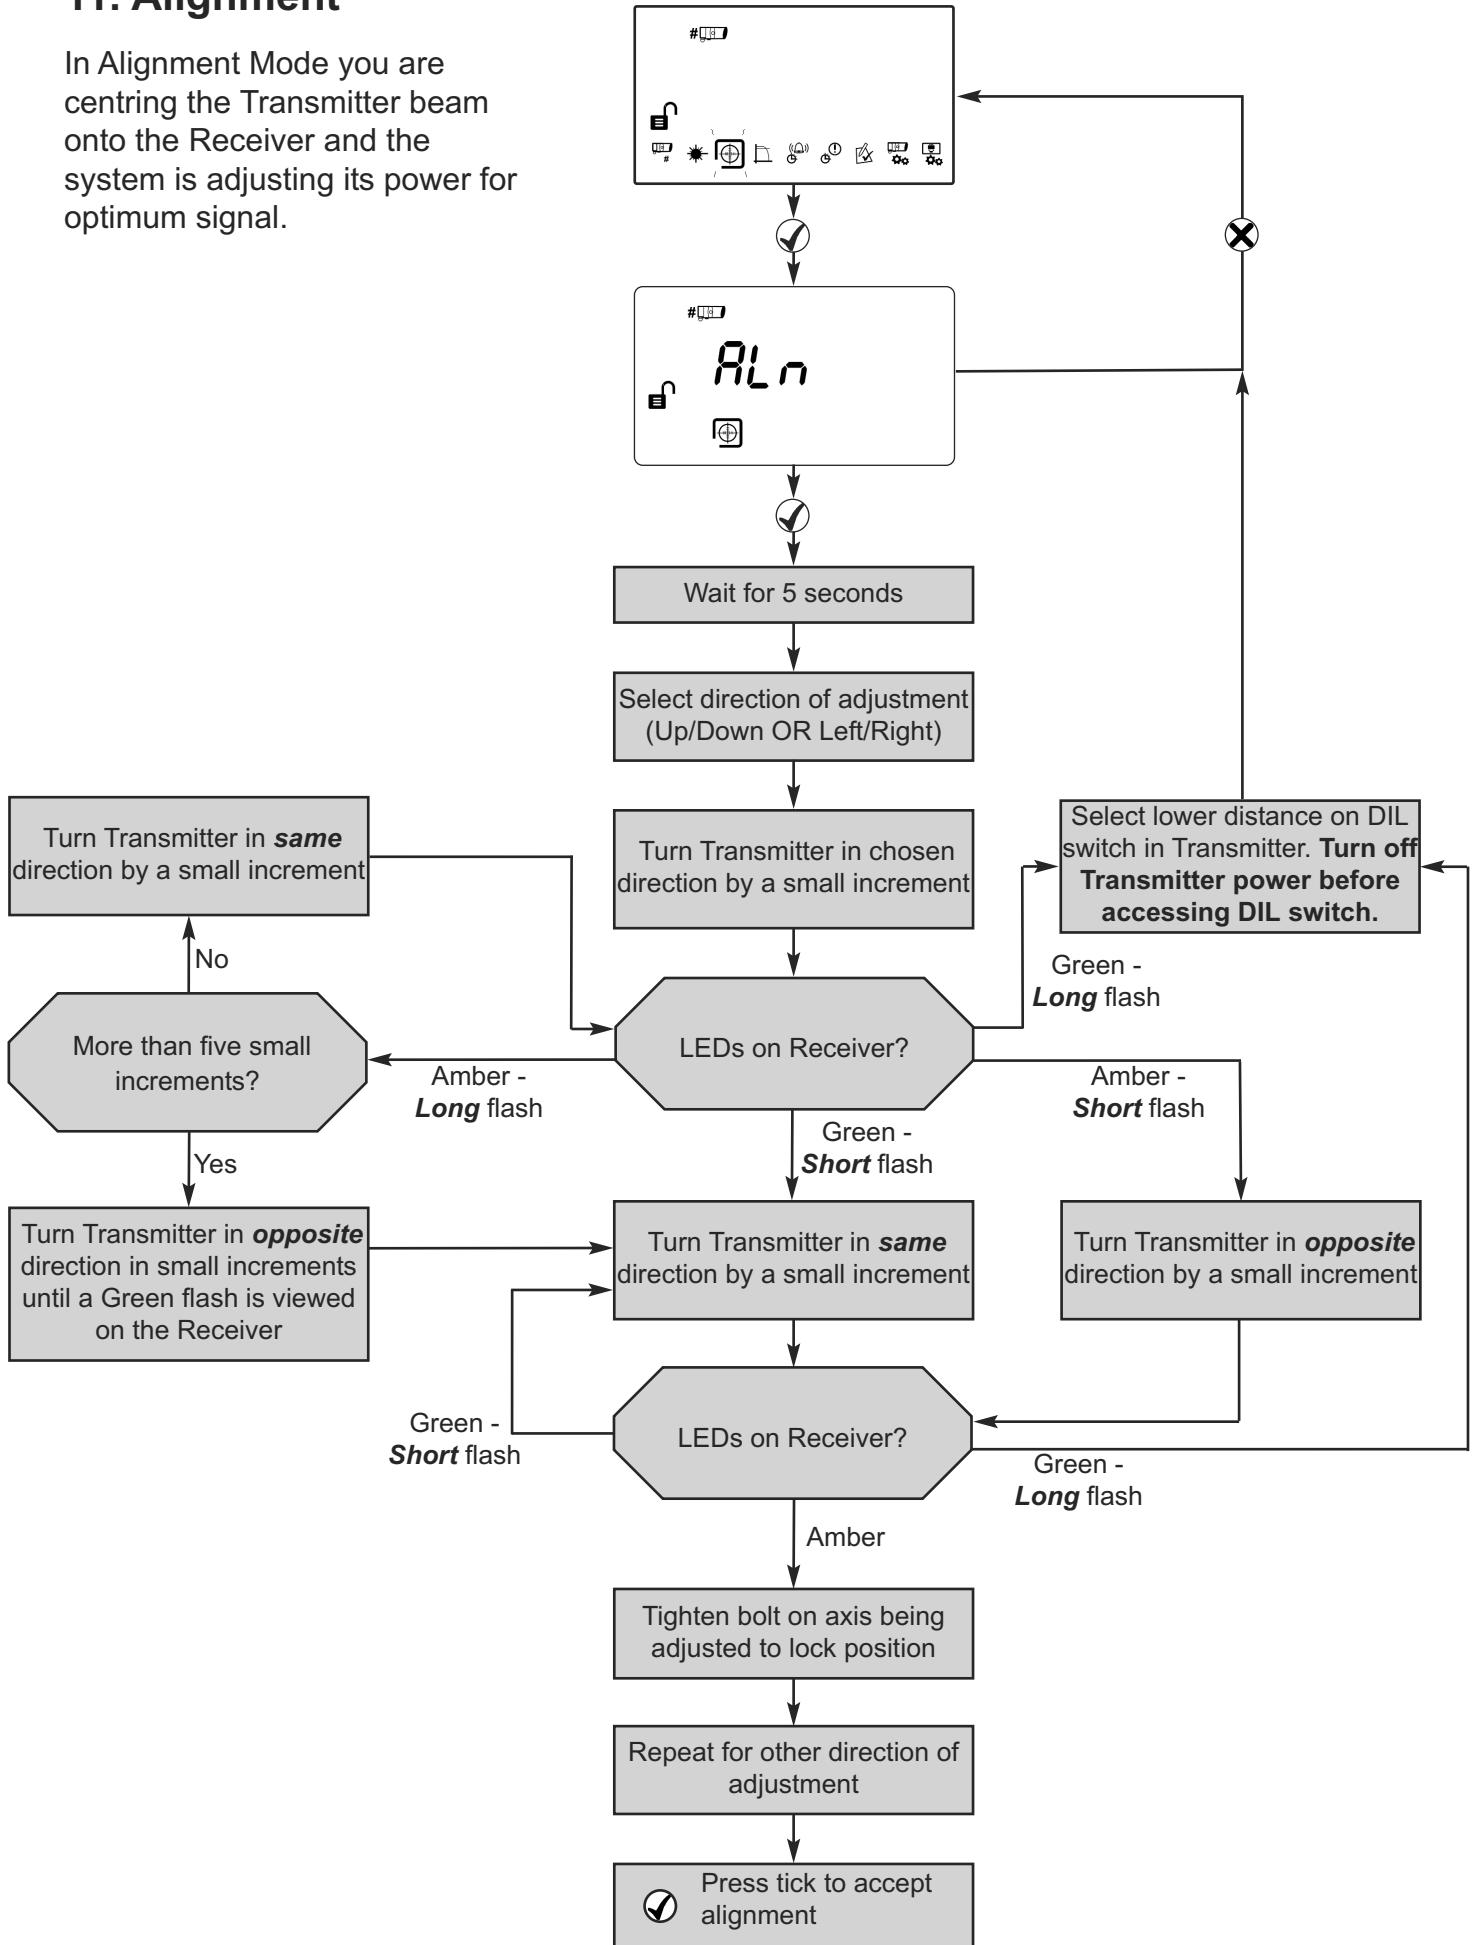

Visual representation of flowchart:

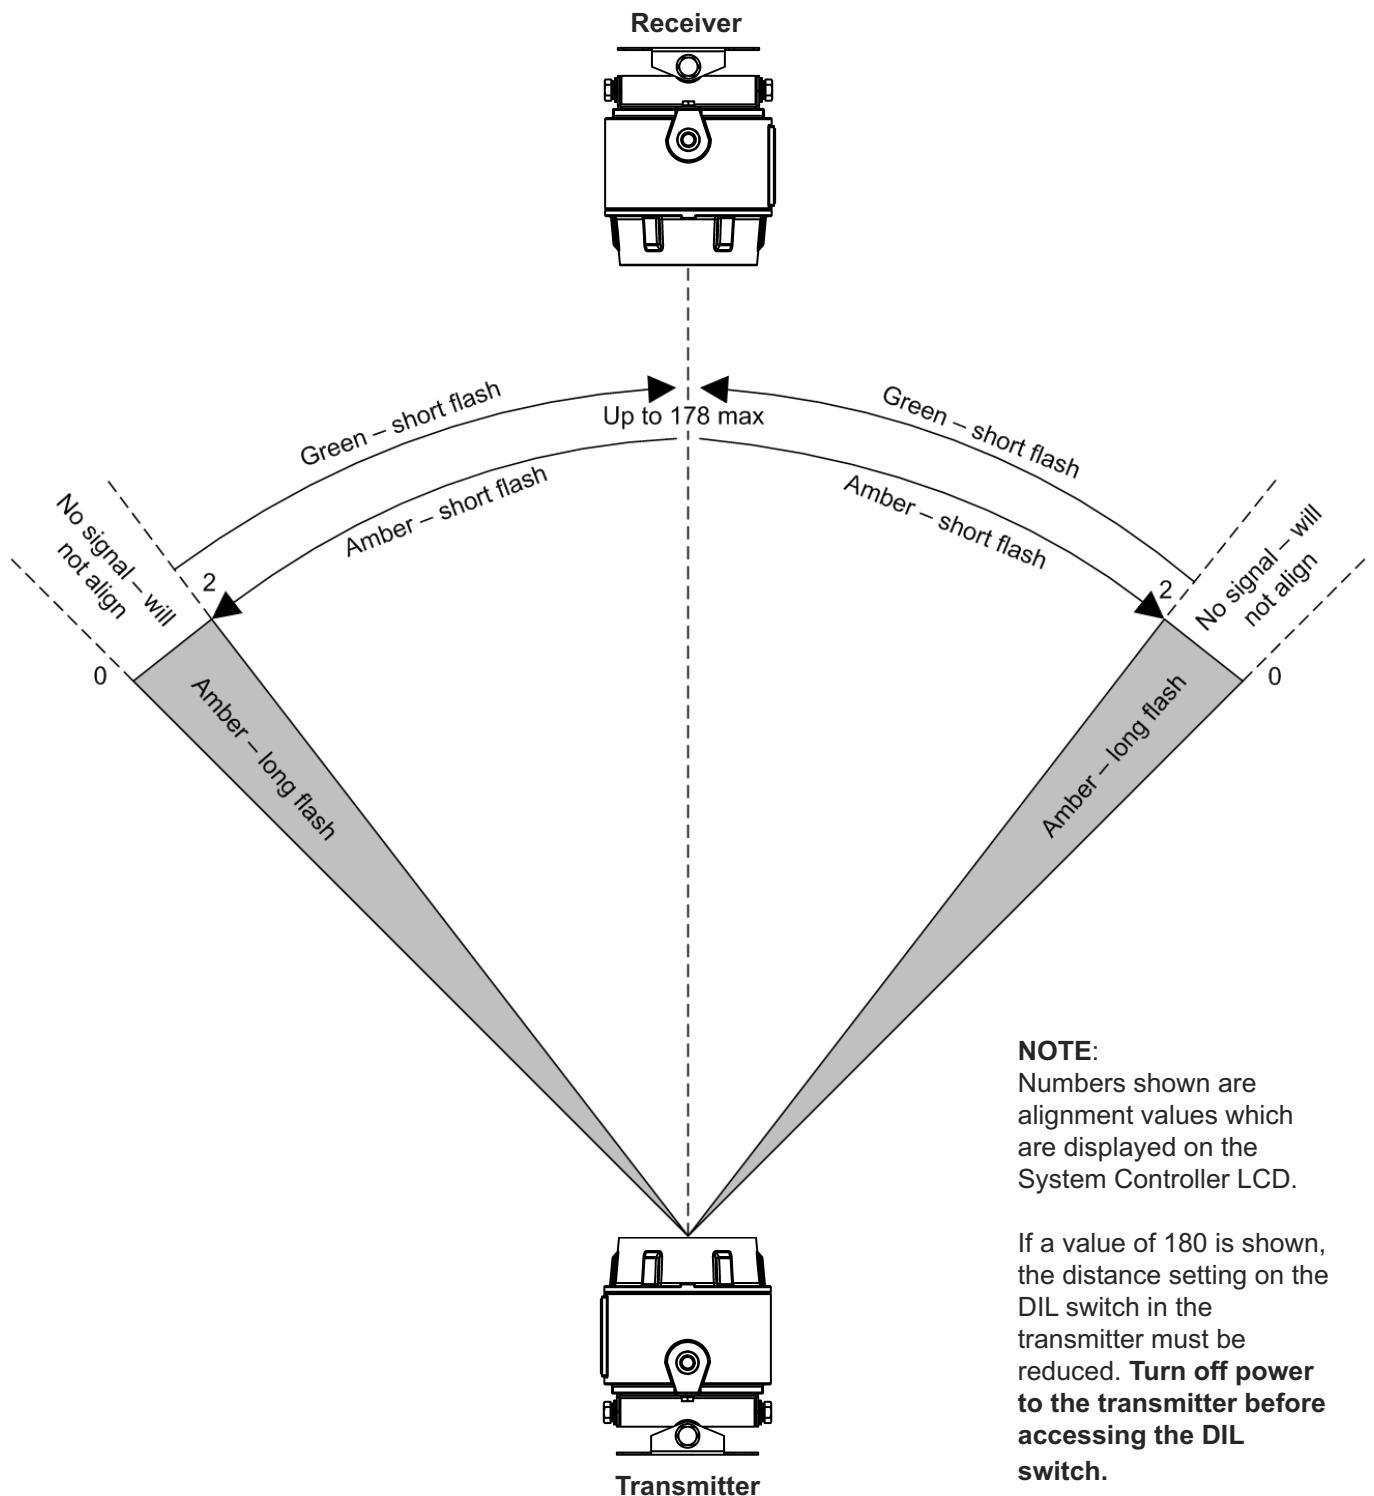

## 12. Manual Fire and Fault Tests

After installation or cleaning, it is recommended that a Manual Fire and Fault test is performed:

**Fire Test:** Slowly half-cover the Receiver. The Controller will indicate Fire after the Fire Delay Time.


Uncover the Receiver. The Controller will return to Normal state after approximately 5 seconds.

**Fault Test:** Completely cover the Receiver taking less than 2 seconds to do so. The Controller will indicate Fault after the Fault Delay time.

Uncover the Receiver. The Controller will return to Normal state after approximately 5 seconds.

## 13. Remote Fire Test

The Remote Fire Test allows the user to perform a Fire Test from the System Controller.

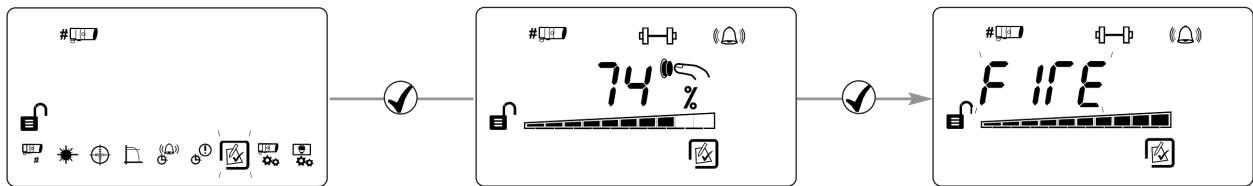

### Receiver Fire LED Test

The Receiver will signal 'Fire', the System Controller will stay Normal.


Press **X** to exit without performing the test.

### Relay / Controller Wiring Test

The System Controller signals 'Fire' to the Fire Control Panel. Press **✓** or **X** to exit.

## 14. Fire Threshold

This setting is the threshold at which the Receiver will detect a fire. Default factory setting=35%. (Set for each Receiver).

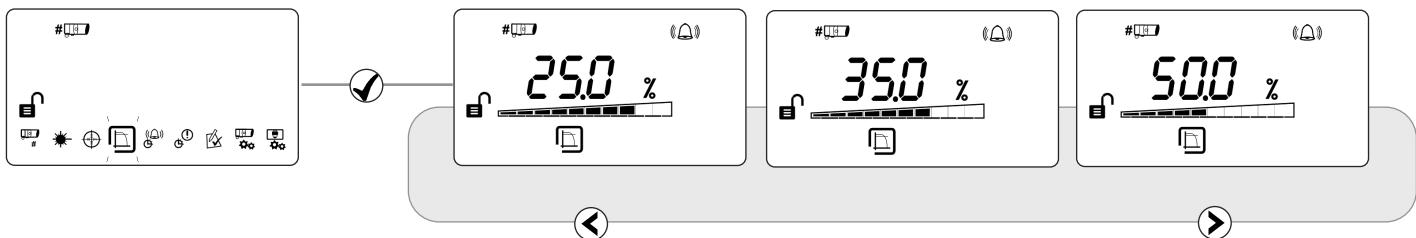

- Sensitivity can be adjusted in 1% steps by pressing up or down keys
- Press ✓ to accept setting


### EN Approved Sensitivity Ranges:

Complies with EN54-12: 2015 for a sensitivity level of 25%, with a maximum delay to fire of 20 seconds.

## 15. Delay To Fire

This setting is the delay the System Controller uses before signalling a FIRE condition to the Fire Control Panel. Default factory setting=10 seconds.


(Set for each Receiver).

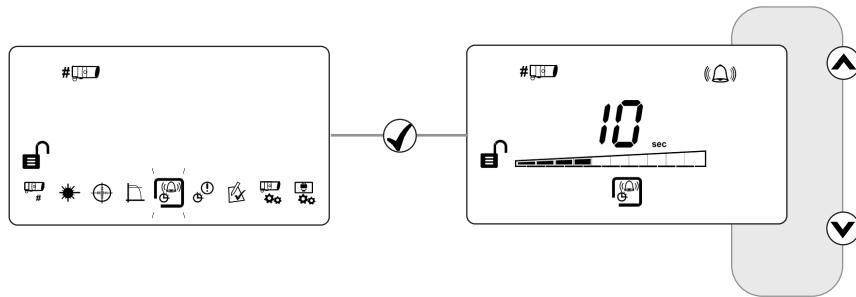

## 16. Delay To Fault

This setting is the delay the System Controller uses before signalling a FAULT condition to the Fire Control Panel. Default factory setting=10 seconds.


(Set for each Receiver).

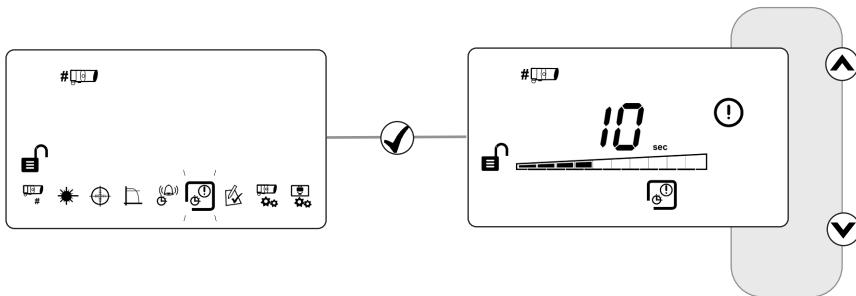

## 17. Latching/Non-Latching Mode

In Latching Mode the system will stay in Fire condition after the fire clears. In Non-Latching Mode the system will automatically return to normal condition after the fire clears

Default factory setting=Non-Latching (Set for each Receiver).

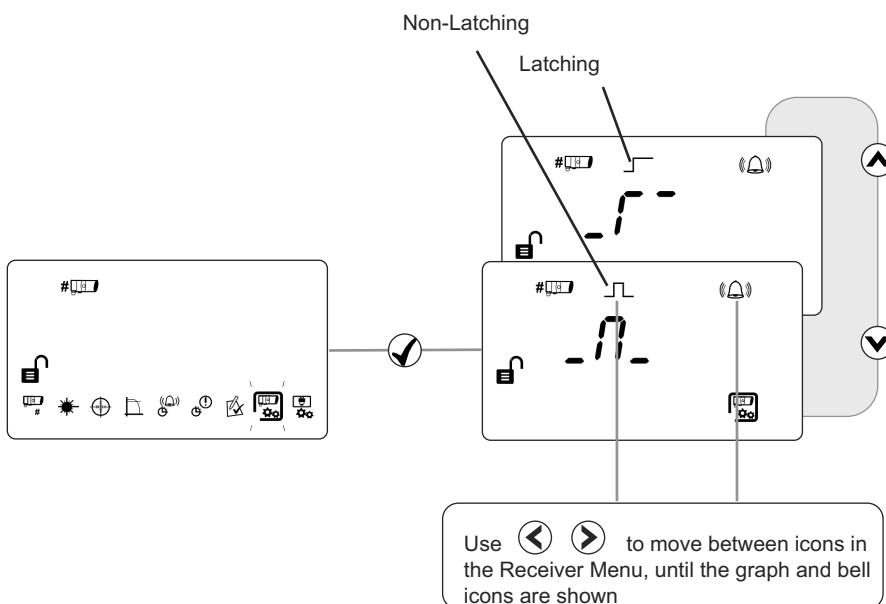

To clear a latched fire, apply 5-40V to the External Reset terminal, enter the passcode, or power cycle for 20s.

## 18. Maintenance

The system will automatically compensate for dust build-up by changing the Compensation Level. This equipment includes a non-metallic outer protective coating. To avoid the possibility of electrostatic charges, cleaning must only be carried out with a damp or anti-static cloth. It is recommended that the Receiver lenses are cleaned periodically.

The system should be isolated from the Fire Control Panel before cleaning takes place. After cleaning, verify that the system is operating normally by following the Alignment procedure and the Fire and Fault Tests described in this User Guide.

The Ex d Optical Beam Smoke Detector comes with a 5 year warranty as standard. With continued servicing and maintenance, the lifetime of the beam can exceed 10 years.

## 19. Troubleshooting

E-00	<b>AIM not recognised</b>	Refer to manufacturer for further technical assistance
E-01	<b>Receiver Communications Fault</b>	Check wiring between Controller and Receiver
E-02	<b>'Find' not successfully executed</b>	Follow 'Find' process
E-03	<b>Compensation limit reached</b>	Clean and re-align system
E-04	<b>Receiver missed too many readings, or lost synchronization with the Transmitter</b>	Ensure clear line of sight from Transmitter to Receiver
E-05	<b>Receiver is not aligned</b>	Follow alignment procedure
E-06	<b>Rapid Obscuration Fault</b>	Ensure clear line of sight from Transmitter to Receiver
E-07	<b>Signal High Fault</b>	Ensure there is no stray light from another source
E-15	<b>Signal too low at end of alignment</b>	Ensure clear line of sight from Transmitter to Receiver. Ensure alignment of Transmitter AND Receiver. Do not exit whilst alignment status LEDs are still flashing
E-16	<b>Signal too high at end of alignment</b>	Follow alignment procedure again. Do not exit whilst alignment status LEDs are still flashing
E-18	<b>Overcurrent Detected</b>	Check wiring between Controller and Receiver
E-19	<b>IR signal integrity fault</b>	Check there are no strong sources of light near the Receiver, or direct sunlight
E-20	<b>Ambient light fault</b>	Check there are no strong sources of light near the Receiver, or direct sunlight
E-21	<b>Power too low fault</b>	Check power supply to Controller

## 20. Technical Specifications

Parameter	Value
Operating Distance between Transmitter and Receiver	10 to 80m
Operating Voltage	12 to 36V DC +/- 10%
Operating Current - Controller (with 1 or 2 Receivers)	14mA
Operating Current - Transmitter	8mA
Power Down Reset Time	>20 seconds
Fire and Fault Relay Contacts	VFCO 2A@ 30 Volts DC, resistive
Maximum Cable Length (Controller to Receiver)	100m
Operating Temperature	-10°C to +55°C (non-condensing) as per EN 54-12:2015 -20°C to +55°C (non-condensing) - ATEX
Storage Temperature	-40°C to +85°C (non-condensing)
Optical Wavelength	850nm
Receiver Tolerance to Beam Misalignment at 25% sensitivity	$\pm 2.0^\circ$
Transmitter Tolerance to Beam Misalignment at 25% sensitivity	$\pm 0.5^\circ$
Fire Threshold Range	0.45 - 3.98 dB 10 - 60%*
Delays to Fire and Fault	2-30s, individually selectable*
Rapid Obscuration Fault Threshold	85%
LED Indications - Control Unit:	Red = Fire (one for each Receiver) Amber = Fault (one for each Receiver) Green = System OK
Receiver:	Green and Amber indication LEDs for single-person alignment
IP Rating	IP54 - Controller IP66 - Receiver/Transmitter
Relative Humidity	93% (non-condensing)
Housing Construction - Controller: Transmitter/Receiver:	UL94 V2 PC Copper Free Aluminium Alloy LM25, red
<i>Sealing Ring</i> Bracket:	EPDM 70 Steel, red
Cable Gland Entries	3 x 20mm

\* Complies with EN 54-12: 2015 for a sensitivity level of 25%, with a maximum delay to fire of 20 seconds.

Dimensions	Width, mm (in)	Height, mm (in)	Depth, mm (in)	Weight, kg (lb)
Controller Unit	203 (8.0)	124 (4.9)	73.5 (2.9)	0.606 (1.3)
Transmitter & Receiver	149 (5.9)	172 (6.8)	190 (7.5)	3.7 (8.2) inc. brackets

