


End-To-End Optical Beam Smoke Detector User Guide


General Information

IMPORTANT NOTE: The infrared beam path MUST be kept clear of obstructions at all times! Failure to comply may result in the system initiating a Fire or Fault signal.

- For detectors approved to UL268 being installed in a room with a ceiling height of 10 feet, the detector should be installed with a distance of 30cm to 50cm from the ceiling in accordance with the UL268 fire test. For all other UL268 installations, refer to NFPA72 for installation guidance
- All installations should comply with local regulations
- Ensure a clear line of sight from Receiver to Transmitter
- Mount on solid surfaces (structural wall or girder) and ensure fixing is rigid
- Position beam as high as possible, but with a minimum distance of 30cm from Receiver/Transmitter to ceiling
- Mount Receiver and Transmitter directly opposite each other
- Do NOT position where personnel or objects can enter the beam path
- Do NOT install the Transmitter or Receiver in environments where condensation or icing are likely to occur
- There are no user-serviceable parts within the detectors

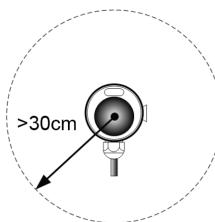

Ensure clear line of sight from Receiver to Transmitter

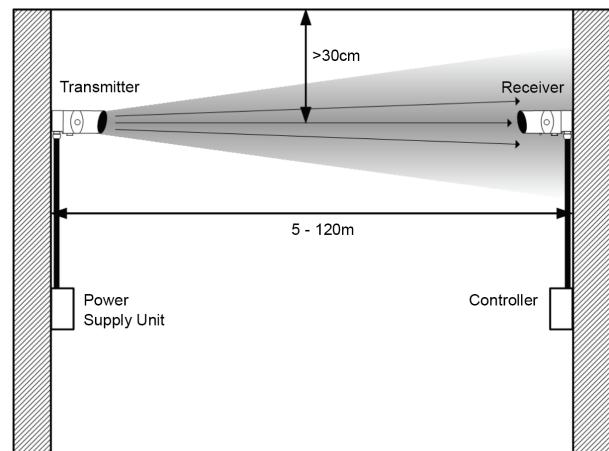


SCAN THE QR CODE
TO EXPLORE THE FIRERAY
3000 PRODUCT RANGE




SCAN THE QR CODE
TO EXPLORE THE FIRERAY
3000 EXD PRODUCT RANGE

Fitting The Product

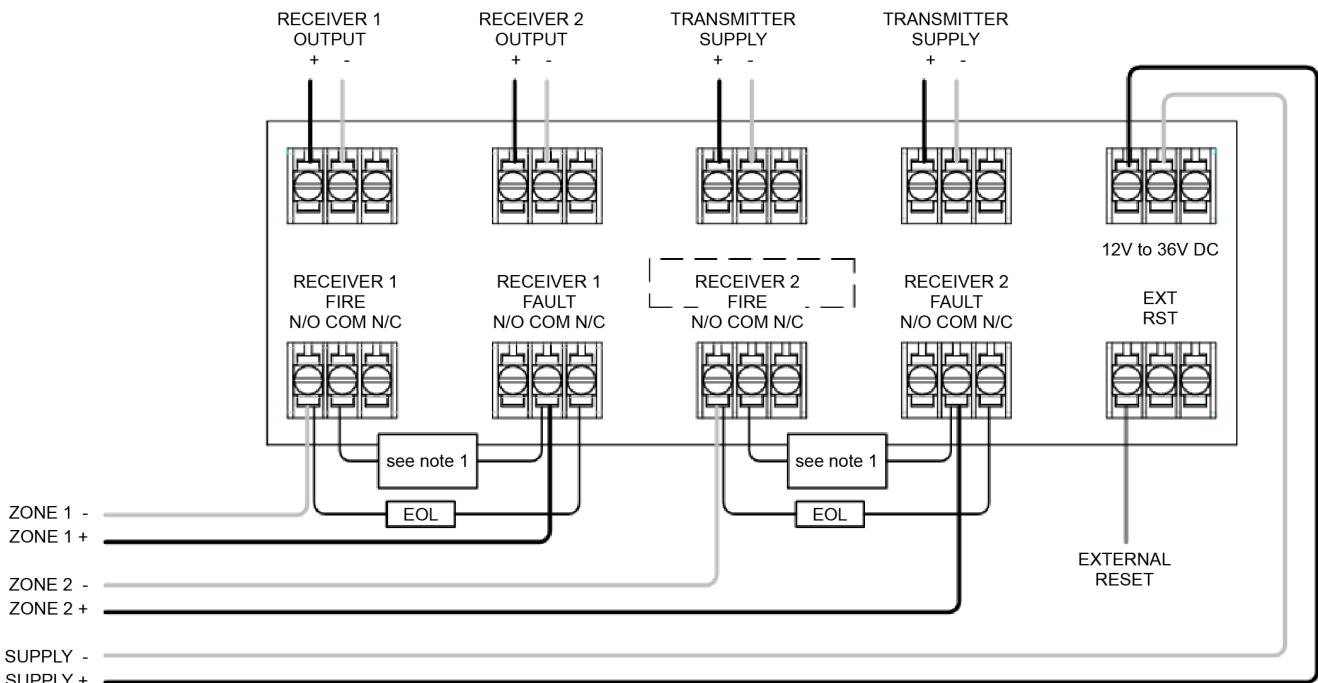

For connection of two Receivers to one zone:

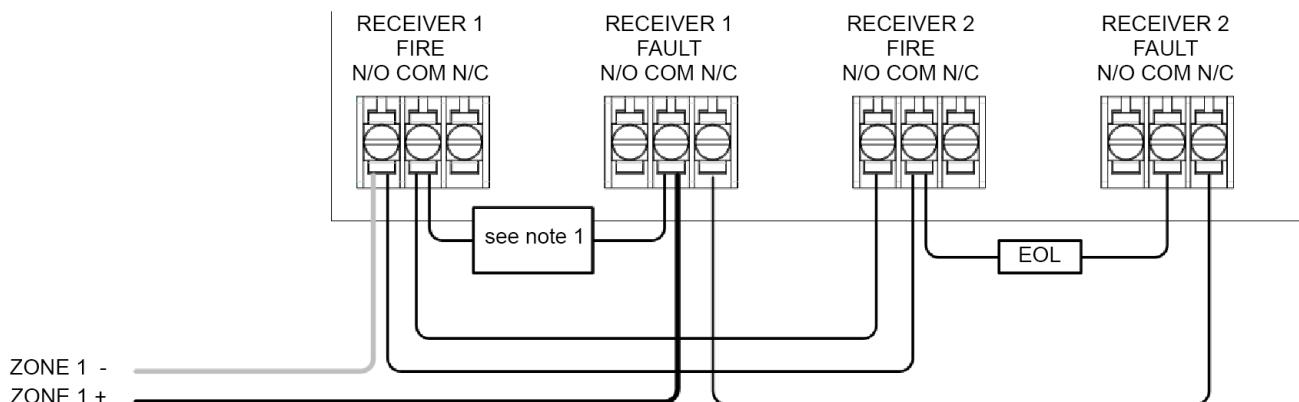

Note 1: This component is the fire resistor. Its value is specified by the Fire Control Panel manufacturer. For U.S. installations it is typically a short circuit

ALWAYS use a separate 2-core cable for each Receiver head

CAUTION: For system monitoring - Do not use looped wire under any terminals. Break wire run to provide monitoring of connections Components not supplied:

End Of Line ('EOL') component - supplied by Fire Control Panel manufacturer


Fire Resistor

After installation, check operation of Fire and Fault connection on Fire Panel

Apply a voltage of 5V to 40V to 'EXT RST' contact for at least 2 seconds to clear a latched fire condition


For wiring to other types of Fire Control Panel, or to wire multiple Controllers onto one Zone, refer to additional installation instructions supplied with the product

Fitting The Product cont'd.

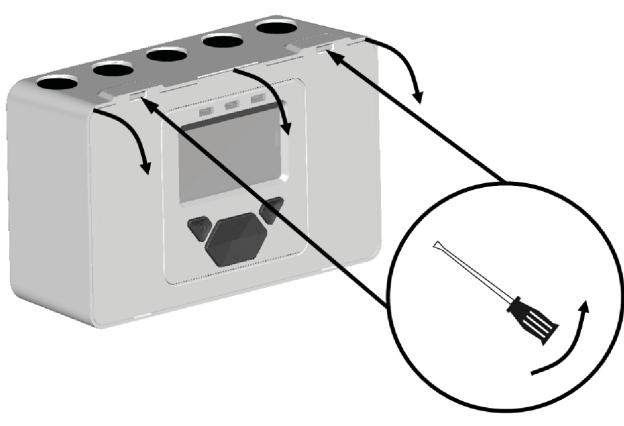


RECEIVER


TRANSMITTER:

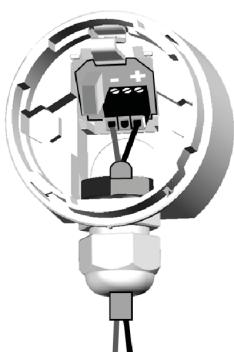

- +
TO 'RECEIVER
OUTPUT' ON
CONTROLLER
BOARD

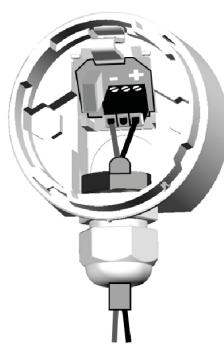

- +
TO
12 to 36V SUPPLY OR
'TRANSMITTER SUPPLY'
ON CONTROLLER
BOARD

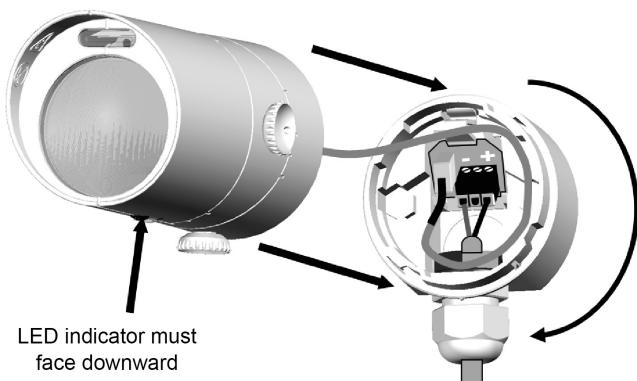


LED indicator must
face downward

Apply Power


One System Controller can be used to control and monitor up to two Receiver heads. The '#' symbol in this guide is used to represent the number of the Receiver currently selected (1 or 2).

Apply Power to Controller,
Receiver(s) & Transmitter

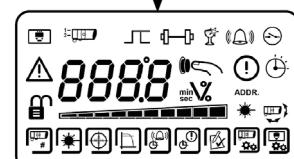


3 seconds


Receivers are not found (normal at this stage):

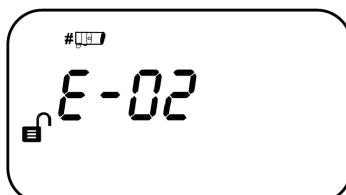


Commissioned System:

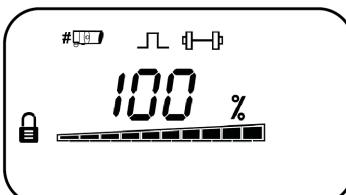

Receivers have been found but not commissioned:

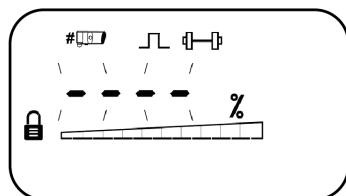

Communications fault, or no Receiver connected:

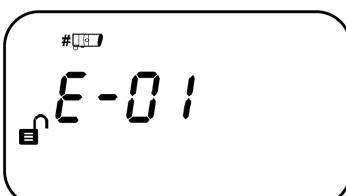

Enter Pass Code to Access Engineering Menu


Press  to enter PASS CODE SCREEN in USER MENU

Default Pass Code: 1234

-   Change digit
-   Move between digits
-  Accept


And incorrect Pass Code will return the display to the Pass Code entry screen.

Three incorrect attempts will lock access for three minutes.

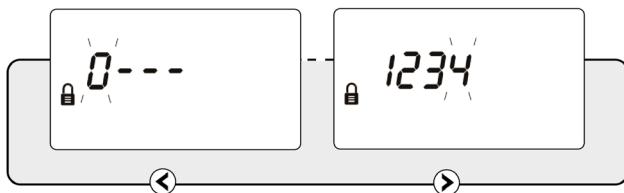


Finding Receivers

Perform 'Find' during initial installation, or when adding or removing Receivers

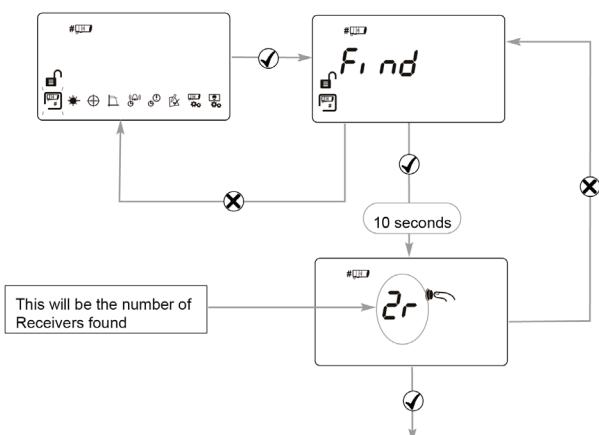

Select Receiver to be Accessed

All Receivers need to be aligned separately
Steps 8 and 9 explain how to align individual Receivers

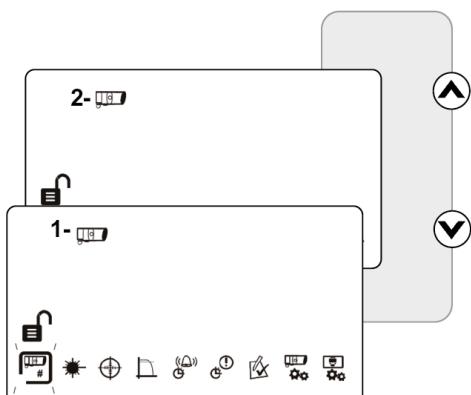


LASER Targeting

The LASER in the Receiver head is used to align the Receiver with the Transmitter.

The LASER can be activated using the button on the Receiver head whilst in Engineering Menu, or via the LASER icon in the ENGINEERING MENU as shown below.

Move the LASER as close to the Transmitter as possible, by moving the Receiver's thumbwheels.

The system will signal Fault while in this mode.

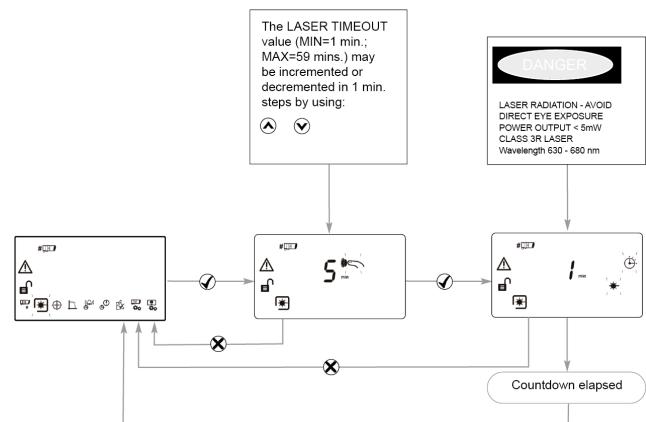


If it is not possible to see the LASER because of the installation environment (for example, if there is high ambient light) then align the Receiver by eye so that it is pointing at the Transmitter.


Alignment

Step 1

In installation mode you are centring the Transmitter beam onto the Receiver and the system is adjusting its power for optimum signal.


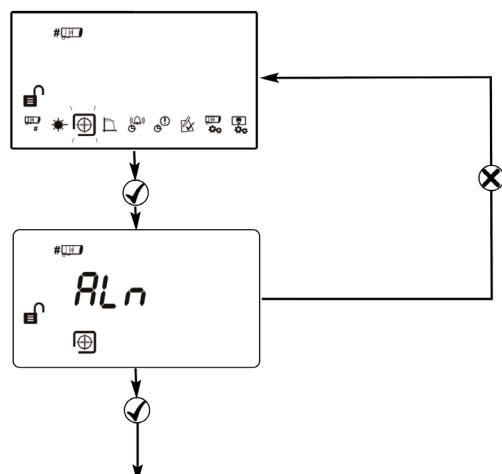


Step 2

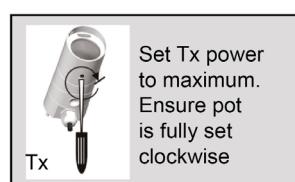

NOTE 1: Value can be between 2 and 178.
A higher value means a better alignment.

Step 3

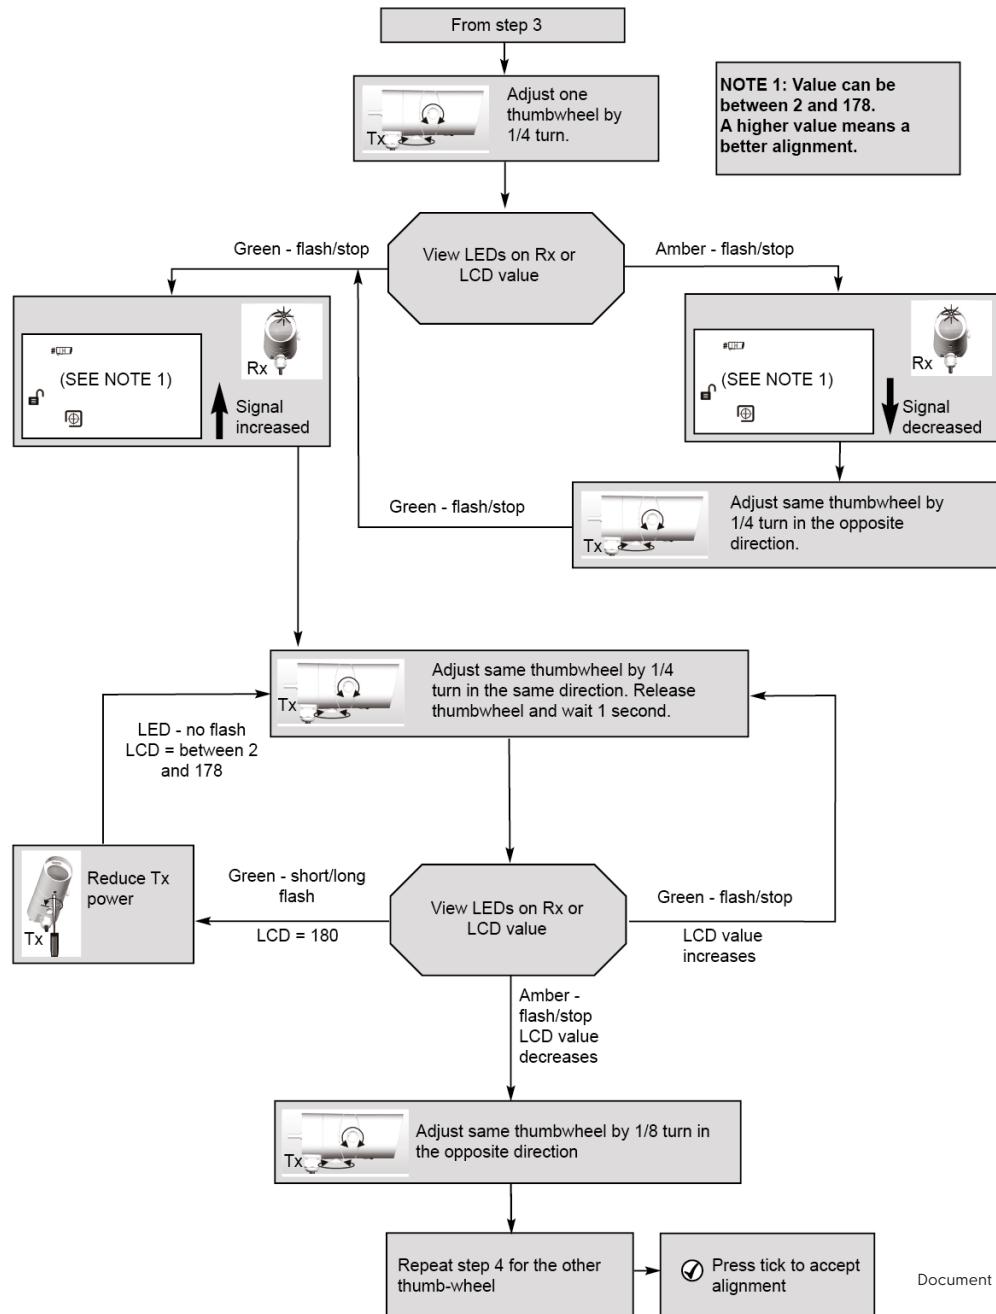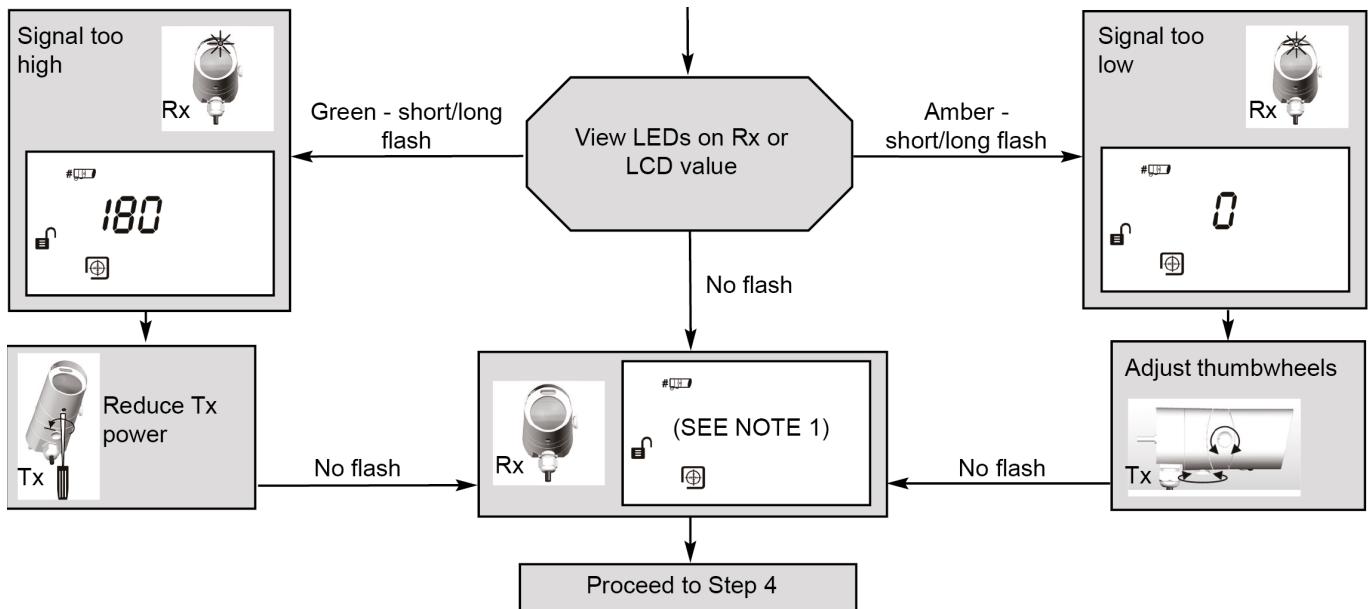

Manual Fire and Fault Tests

After installation or cleaning, it is recommended that a Manual Fire and Fault test is performed:

Fire Test: Slowly half-cover the Receiver. The Controller will indicate Fire after the Fire Delay Time.

Uncover the Receiver. The Controller will return to Normal state after approximately 5 seconds.


Fault Test: Completely cover the Receiver taking less than 2 seconds to do so. The Controller will indicate Fault after the Fault Delay time.

Uncover the Receiver. The Controller will return to Normal state after approximately 5 seconds.

Remote Fire Test

The Remote Fire Test allows the user to perform a Fire Test from the System Controller.

The Remote Fire Test is acceptable for Fire Authority Acceptance and Routine Maintenance per UL268.

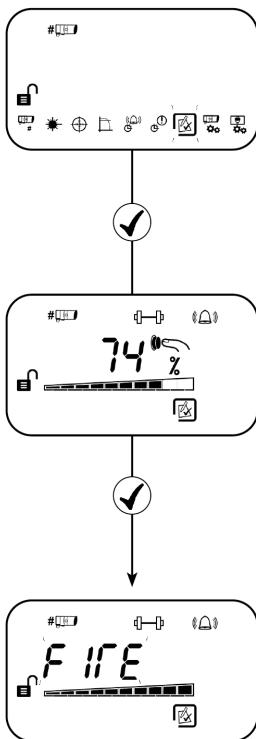

Receiver Fire LED Test

The Receiver will signal 'Fire', the System Controller will stay Normal.


Press **X** to exit without performing the test.

Relay / Controller Wiring Test

The System Controller signals 'Fire' to the Fire Control Panel. Press **✓** or **X** to exit.

Fire Threshold

This setting is the threshold at which the Receiver will detect a fire. Default factory setting=35%.
(Set for each Receiver).

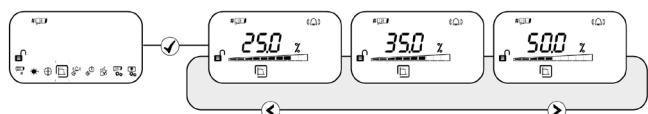

Sensitivity can be adjusted in 1% steps by pressing up or down keys

Press **✓** to accept setting

Fireray 3000 - UL268 Fire Threshold Ranges

Distance between Transmitter and Receiver	Fire Threshold Range
10 - 20 m	25 - 30%
20 - 40 m	25 - 45%
40 - 60 m	35 - 60%
60 - 80 m	45 - 60%
80 - 100 m	55 - 60%
100 - 120 m	60%


EN Approved Sensitivity Ranges

Complies with EN54-12:2015 for sensitivity level of 25%, with a maximum delay to fire of 20 seconds.

Delay To Fire

This setting is the delay the System Controller uses before signalling a FIRE condition to the Fire Control Panel. Default factory setting=10 seconds.


(Set for each Receiver).

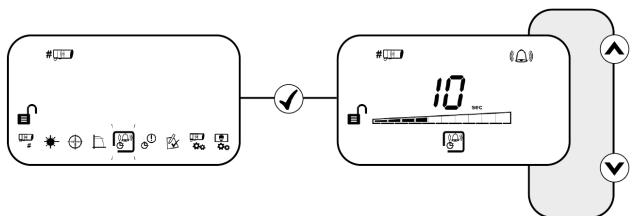

Delay To Fault

This setting is the delay the System Controller uses before signalling a FAULT condition to the Fire Control Panel. Default factory setting=10 seconds.


(Set for each Receiver).

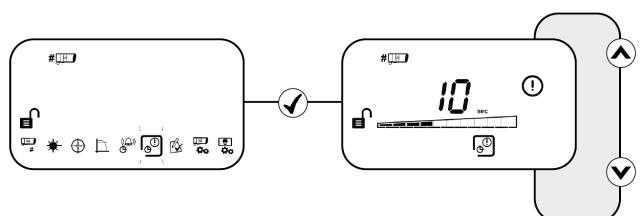

Latching/Non-Latching Mode

In Latching Mode the system will stay in Fire condition after the fire clears. In Non-Latching Mode the system will automatically return to normal condition after the fire clears

Default factory setting=Non-Latching (Set for each

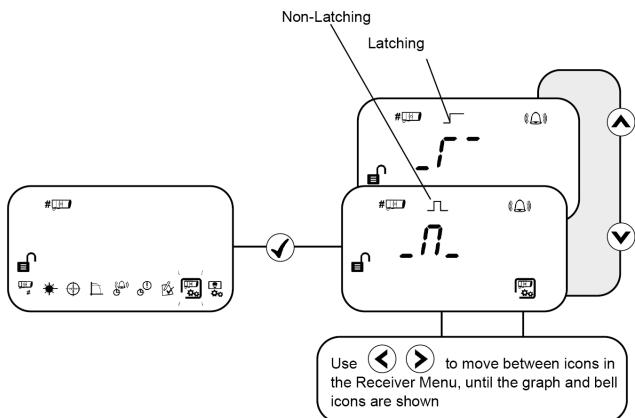

Receiver). To clear a latched fire, apply 5-40V to the External Reset terminal, enter the passcode, or power cycle for 20s.

Cleaning The System

The system will automatically compensate for dust build-up by changing the Compensation Level. However, it is recommended that the Receiver lenses are cleaned periodically with a soft lint-free cloth.

The system should be isolated from the Fire Control Panel before cleaning takes place. After cleaning, verify that the system is operating normally by following the Alignment procedure and the Fire and Fault Tests described in this User Guide.

Troubleshooting

E-00	AIM not recognised	Refer to manufacturer for further technical assistance
E-01	Receiver Communications Fault	Check wiring between Controller and Receiver
E-02	'Find' not successfully executed	Follow 'Find' process
E-03	Compensation limit reached	Clean and re-align system
E-04	Receiver missed too many readings, or lost sync with the Transmitter	Ensure clear line of sight from Transmitter to Receiver
E-05	Receiver is not aligned	Follow alignment procedure
E-06	Rapid Obscuration Fault	Ensure clear line of sight from Transmitter to Receiver
E-15	Signal High Fault	Ensure there is no stray light from another source
E-16	Signal too low at end of alignment	Ensure clear line of sight from Transmitter to Receiver. Ensure alignment of Transmitter AND Receiver. Do not exit whilst alignment status LEDs are still flashing
E-16	Signal too high at end of alignment	Follow alignment procedure again. Do not exit whilst alignment status LEDs are still flashing
E-18	Overcurrent detected	Check wiring between Controller and Receiver
E-19	IR signal integrity fault	Check there are no strong sources of light near the Receiver, or direct sunlight
E-20	Ambient light fault	Check there are no strong sources of light near the Receiver, or direct sunlight
E-21	Power too low fault	Check power supply to Controller

Technical Specifications

Parameter	Value			
Operating Distance between Transmitter and Receiver	5-120m EN, 10-120m UL			
Operating Voltage Range	12 to 36V DC +/- 10%			
Transmitter Current	8mA			
Quiescent Current (Controller with 1 or 2 Receivers)	14mA			
Alarm Current (Controller with 1 or 2 Receivers)	14mA			
Fault Current (Controller with 1 or 2 Receivers)	14mA			
Current Consumption	System Controller, 1 receiver & 1 transmitter = 22mA System Controller, 2 receivers & 2 transmitters = 30mA			
Power Down Reset Time	>20 seconds			
Fire and Fault Relay Contacts	VFCO 2A@ 30 Volts DC, resistive			
Maximum Cable Length (Controller to Receiver)	100m			
Cable Gauge	24 - 14 AWG 0.5 - 1.6mm			
Operating Temperature	-10°C to +55°C (non-condensing) - EN -20°C to +55°C (non-condensing) - UL			
Storage Temperatures	-40°C to +85°C (non-condensing)			
Receiver Tolerance to Beam Misalignment at 25% sensitivity	± 2.0°			
Transmitter Tolerance to Beam Misalignment at 25% sensitivity	± 0.5°			
Fire Threshold Range	0.45 - 3.98 dB 10 - 60% *			
Delays to Fire and Fault	2-30s, individually selectable *			
Optical Wavelength	850nm			
Rapid Obscuration Fault Threshold	85%			
LED Indications - Control Unit	Red = Fire (one for each Receiver) Amber = Fault (one for each Receiver) Green = System OK			
LED Indications - Receiver	Red = Fire. Green and Amber indication LEDs for single-person alignment			
IP Rating	IP54			
Relative Humidity (Max.)	93%, (non-condensing)			
Housing Construction (Controller/Transmitter/Receiver)	UL94 VO PC			
Dimensions	Width, mm (in)	Height, mm (in)	Depth, mm (in)	Weight, kg (lb)
Control Unit	202.7 (7.98)	124 (4.9)	71.5 (2.82)	0.606 (1.34)
Transmitter & Receiver	77.6 (3.05)	77.6 (3.05)	160 (6.3)	0.207 (0.46) inc. brackets

*Complies with EN54-12:2015 for sensitivity level of 25%, with a maximum delay to fire of 20 seconds

Document Number: 0044-047-06-EN



FFE Limited, 9 Hunting Gate, Hitchin, Hertfordshire SG4 0TJ, UK

t: +44 (0) 1462 444 740 **e:** sales@ffeuk.com **w:** ffeuk.com

FFE Limited, 1455 Jamike Ave Ste 200, Erlanger, KY 41018-3147, USA

t: +1859 957 1570 **e:** america@ffeus.com **w:** ffeus.com

Specifications and wiring information are provided for information only and are believed to be accurate. FFE Ltd assumes no responsibility for their use. Data and design are subject to change without notice. Installation and wiring instructions are shipped with the products and should always be used for actual installation. For more information, contact your Sales Representative.